# STEP STOOL




#### **MATERIALS**

- 2x6 14" Fir (2) (bottom stringer)
- 2x6 7" Fir (2) (top stringer)
- 2x4 12" Fir (1) (cross piece)
- 1x415" Fir or Hemlock (4) (treads)
- 11/2" ring shank nails (16)
- 3" wood screws (4) \
- Wood GlueStain or Paint
- Letters (if wanted) ABC

### **ASSEMBLY TOOLS**

- Hammer  $\checkmark$
- Tape measure
- Pencil \
- Drill
- Paint brush or foam brush






# STEP ONE . \ \

Glue and nail two 1x4x15" pieces to one end of two 2x6x14" pieces so that the front and sides are flush. This is the bottom step.



## STEP TWO . \

Glue and nail two 1x4x15" pieces to two 2x6x7" pieces so that the all sides are flush. This is the top step.

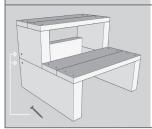

# STEP THREE \\

Place the top step onto the back section of the bottom step. Center the 2x4x12" piece flush with the back and attach with two wood screws per side.



## STEP FOUR ABC

Stain or paint your step stool to any color of your liking, decorate as you wish, and it is ready to be used around the house!

| NOTES: |  |  |  |
|--------|--|--|--|
|        |  |  |  |
|        |  |  |  |
|        |  |  |  |
|        |  |  |  |
|        |  |  |  |
|        |  |  |  |
|        |  |  |  |